



PHILIPS







Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2007 © Koninklijke Philips Electronics N.V. All rights reserved.



Printed in China

    wk7065

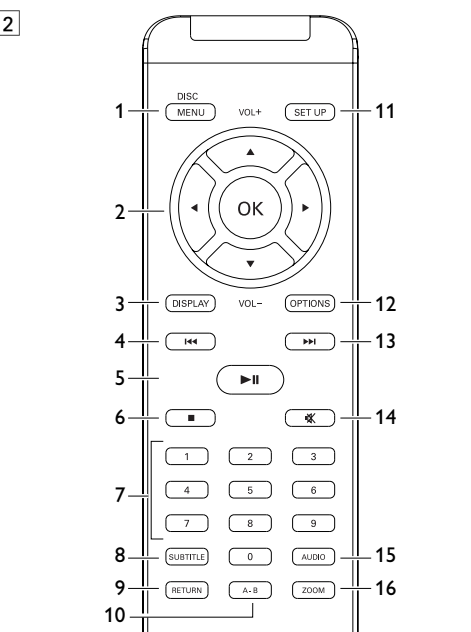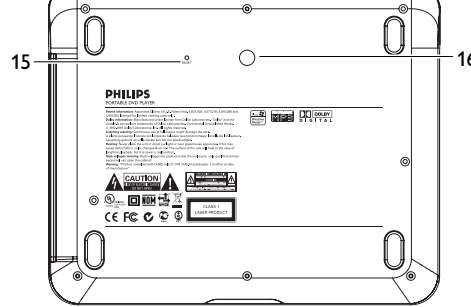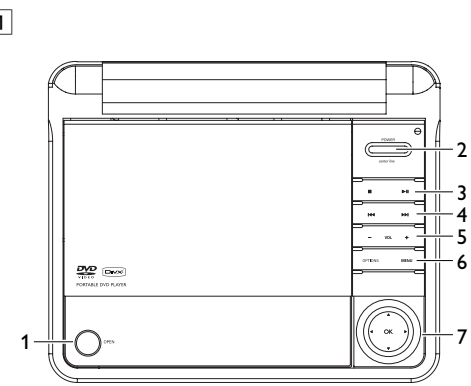

English

Content

1	Control elements and functional components	4.1	Charge the DVD player
1.1	Main unit controls	4.2	Powering your remote control
1.2	Front of player	5	Start up
1.3	Right of player	5.1	Setup
1.4	Back of the player	5.2	Playback DVD
1.5	Remote Control	5.3	Playback VCD
2	Introduction	5.4	Playback Super (S)-VCD
2.1	Your portable DVD player	5.5	Playback Music CD
2.2	Unpacking	5.6	Playback Music MP3/WMA-CD
2.3	Placement	5.7	Playback Picture-CD
2.4	Playable disc formats	5.8	Playback from USB
2.4.1	DVD-Video	6	Addition Functions
2.4.2	Video CD	6.1	DISPLAY Menu
2.4.3	Audio CD / MP3 CD / WMA CD	6.2	Connection
2.4.4	CD with JPEG files	6.2.1	Headphone
2.4.5	DivX video discs	6.2.2	TV
2.5	Zero Bright Dot™	6.2.3	AV input
3	General information	6.2.4	USB
4	Charging the units	6.2.5	Coaxial
		7	Troubleshooting
		8	Technical data

1 Control elements and functional components

1.1 Main unit controls (see figure [1])

1 OPEN	Open disc door to insert or remove disc
2 POWER	Switch the player on / off
3 ■	Press once to stop playback and store the stop position. Press twice to stop playback completely.
►►	Start / pause / resume playback
4 ◀◀ / ▶▶	Search backward (◀◀) or search forward (▶▶)
5 -VOL +	Volume control
6 OPTION	Access additional functions
7 MENU	Display MENU page
8 ▲, ▼, ◀, ▶	Up / down / left / right cursor
9 OK	Confirm selection

1.2 Front of player (see figure [1])

POWER/IR/CHR	Power / Remote sensor / charging indicator
--------------	--

1.4 Right of player (see figure [1])

9 PHONE 1 & 2	Headphones jack
10 AV OUT	Audio/Video output
11 AV IN	Audio video input
12 USB	USB connector
13 COAXIAL	Digital audio output
14 DC IN 9V	Power supply socket

1.5 Back of the player (see figure [1])

15 Reset	Reset the player when it is hanged up
16 Car mounting screw hole	

1.6 Remote Control (see figure [2])

1 MENU	Display MENU page
2 ▲, ▼, ◀, ▶	Up / down / left / right navigation key
3 OK	Confirm selection
4 VOL + / -	Volume control
5 DISPLAY	Adjust the display value of the system
6 ◀◀	Skip to previous chapter, track or title
7 ►►	Start / pause / resume playback
8 ■	Press twice to stop playback
9 0 - 9	Numeric keypad
10 SUBTITLE	Subtitle language selector
11 RETURN	For VCD menu page
12 A - B	To repeat or loop a sequence in a title
13 SETUP	Enter SETUP menu
14 OPTION	Access additional functions
15 ►►	Skip to next chapter, track or title
16 ◀◀	Mute player volume
17 AUDIO	Audio language selector
18 ZOOM	Enlarge video image

CAUTION Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

2 Introduction

2.1 Your portable DVD player

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up). The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included. What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

2.2 Unpacking

First check and identify the contents of your package, as listed below:

- Portable DVD player
- Remote Control (AY5507)
- Car adaptor (12V) (AY4115)
- AC power adaptor (AY4117)
- User manual
- Car headrest mounting kit (AY4246)

2.3 Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be repaired. Other cleaning methods may destroy the lens.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

2.4 Playable disc formats

In addition to DVD-Video disc, you will also be able to play all Video CDs, CDs, CDR, CDRW, DVD±R and DVR+RW.

2.4.1 DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.

2.4.2 Video CD

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case. To make access easy and convenient, your player lets you move between tracks and between indexes.

2.4.3 Audio CD / MP3 CD / WMA CD

Audio CDs / MP3 CD / WMA CD contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).

2.4.4 CD with JPEG files

You can also view JPEG still photos on this player.

2.4.5 DivX video discs

DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size. DivX files can also include advanced media features like menus, subtitles, and alternate audio tracks. Many DivX media files are available for download online, and you can create your own using your personal content and easy-to-use tools from DivX.com.

2.5 Zero Bright Dot™

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD displays commonly have imperfections, termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for 'bright dots'. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality. Warranty service varies from region to region. Contact your local Philips representative for more detailed information.

3 General information

Power Sources

- This unit operates on a supplied AC adaptor, car adaptor, or a rechargeable battery pack.
- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Unplug the AC adaptor from the outlet or remove the battery pack when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Please always use supplied AC/DC adaptor (AY4129)

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes.
- Any service should be done by qualified service personnel.
- Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.

Hearing Safety

- Listen at a moderate volume.
- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc. it may create a traffic hazard and is illegal in many areas.
- Important (for models with by-packed headphones): Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips.
- Traffic safety: do not use while driving or cycling as you may cause an accident.
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submersed in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles)
- Do not touch the lens!

When the player is in use for a long period of time, the surface will be heated. This is normal.

Handling discs

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.

On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

"DivX, DivX™ Certified, and associated logos are trademarks of DivX, Inc. and are used under license." All other brand and product names are trademarks of their respective companies or organizations. Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties. The Windows Media and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

4 Charging the units

4.1 Charge the DVD player

- Plug in the AC/DC adaptor
- The RED LED indicates that charging is in progress. When the set is not in use, it will take about 4 hours to fully charge it. However, when in use, it will take more than 8 hours to fully charge it.*
- The RED LED will turn off when the set is fully charged. When the low battery icon appears on the screen, please charge the player.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

4.2 Powering your remote control

- 1 Open the battery compartment. Remove the protective plastic tab (first time users only).
- 2 Insert 1 x lithium 3V battery, type CR2025, then close the compartment.

CAUTION

- Batteries contain chemical substances, so they should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Remove the batteries if the set is not to be used for a long time.
- Perchlorate Material – special handling may apply. See www.dtscc.ca.gov/hazardouswaste/perchlorate.

5 Start up

5.1 Setup

- 1 Press **SETUP**. A list of features is shown.

Setup menu	PHILIPS
General	Unplug the AC adaptor
Menu	Set video output format to TV system
Audio	Select subtitle language for Mpeg 4 video, e.g. DivX video
Repeat	Press REPEAT key to select Repeat 1 track or Repeat all tracks
Shuffle	Press SHUFFLE key to turn shuffle playback on or off
Stop	Press STOP key to stop playback
Fast backward / Fast forward	Keep pressing ◀◀ or ▶▶ will search in fast speed, 2X, 4X, 6X or 8X. Then, press ►► to resume normal playback
Volume Control	Press ▲ or ▼ briefly or repeatedly to increase or decrease the sound volume
Stop	Press STOP key to stop playback
Subtitles	Change subtitle display. The function is available by pressing either the SUBTITLE or OPTIONS key
Language	Change language. The function is available by pressing either the AUDIO or OPTIONS key
Angle	Change the viewing angle provided in the DVD disc. The function is available by pressing the ANGLE key
Zoom	Zoom in the screen, and then use the navigation keys to pan the screen. The function is available by pressing either the ZOOM or OPTIONS key
A-B Repeat	Set repeat loop playback. Press A-B to set the starting point and press A-B again to set the ending point. Then, the player will repeat the loop playback. Press A-B to cancel the loop playback
Display	Change the display value of the system
Navigation	Adjust the navigation value of the system
Power save	Set Power Saving mode ON/OFF
DivX (VOD)	Get the DivX (Video-On-Demand) code
Parental	Set parental options

Set password	Set password (default: 9999)
Factory settings	Restore factory settings
Video	
TV Display	Set screen display aspect ratio
TV standard	Set video output format to TV system
Mpeg 4 subtitle	Select subtitle language for Mpeg 4 video, e.g. DivX video
Audio	
Dolby	Set Dolby output
Digital (SPDIF)	Set digital output format

5.2 Playback DVD

- 1 Briefly press **POWER** on the main control of the player to switch on the set.
- 2 Open the disc door and insert the disc.
- 3 The player will start to play the disc automatically.
- 4 Use navigation keys **◀**, **▶**, **▲**, **▼** to select an item from the DVD disc menu, such as play now, select languages and subtitle.
- 5 The following functions are available during playback:

Pause Press **►►** to pause playback. You can resume playback by pressing **►►** again

Previous/Next Briefly press **◀◀** or **▶▶** once or several times to select your desired chapters

Fast backward / Fast forward Keep pressing **◀◀** or **▶▶** will search in fast speed, 2X, 4X, 6X... Then, press **►►** to resume normal playback

Volume Control Press **▲** or **▼** briefly or repeatedly to increase or decrease the sound volume

Stop Briefly press **■** on the right side of the player to stop playback

Subtitle Change subtitle display. The function is available by pressing either the **SUBTITLE** or **OPTIONS** key

Language Change language. The function is available by pressing either the **AUDIO** or **OPTIONS** key

Angle Change the viewing angle provided in the DVD disc. The function is available by pressing the **ANGLE** key

Zoom Zoom in the screen, and then use the navigation keys to pan the screen. The function is available by pressing either the **ZOOM** or **OPTIONS** key

A-B Repeat Set repeat loop playback. Press **A-B** to set the starting point and press **A-B** again to set the ending point. Then, the player will repeat the loop playback. Press **A-B** to cancel the loop playback

5.3 Playback VCD

- 1 Briefly press **POWER** on the main control of the player to switch on the set.
- 2 Open the disc door and insert the disc.
- 3 The set will start to play the disc automatically.
- 4 The following functions are available during playback:

Pause Press **►►** to pause playback. You can resume playback by pressing **►►** again

Previous/Next Briefly press **◀◀** or **▶▶** once or several times to select your desired track

Fast backward / Fast forward Keep pressing **◀◀** or **▶▶** will search in fast speed, 2X, 4X, 6X or 8X. Then, press **►►** to resume normal playback

Volume Control Press **▲** or **▼** briefly or repeatedly to increase or decrease the sound volume

Stop Briefly press **■** on the right side of the player to stop playback

Audio Some VCDs only contain 2 languages for selection. You can change the language using this function. The function is available by pressing either the **AUDIO** or **OPTIONS** key

Zoom Zoom in the screen, and then use the navigation keys to pan the screen. The function is available by pressing either the **ZOOM** or **OPTIONS** key

A-B Repeat Set repeat loop playback. Press **A-B** to set the starting point and press **A-B** again to set the ending point. Then, the player will repeat the loop playback. Press **A-B** to cancel the loop playback

5.4 Playback Super (S)-VCD

(Super) Video CDs may feature **PBC (Play Back Control)**. This allows you to play the video CDs interactively, following the menu on the display.

- 1 Briefly press **POWER** on the main control of the player to switch on the set.
- 2 Insert the (S)VCD into the disc slot on the right side of the player. If **PBC** is on, the disc index menu will appear on the screen.
- 3 Use numeric keypad 0-9 to input your selection or select a play option.
- 4 Press **RETURN** on the remote control to return to the previous menu.
- 5 To turn Playback Control mode on/off, please go to **SETUP** and select **PBC settings**.

5.5 Playback Music CD

- 1 Briefly press **POWER** on the main control of the player to switch on the set.
- 2 Open the disc door and insert the disc.
- 3 The set will start to play the disc automatically.
- 4 The following functions are available during playback:

Pause Press **►►** to pause playback. You can resume playback by pressing **►►** again

Previous/Next Briefly press **◀◀** or **▶▶** once or several times to select your desired track

Fast backward / Fast forward Keep pressing **◀◀** or **▶▶** will enter the fast search mode. Then, press brief will change the searching speed to 2X, 4X, 6X, 8X, 16x or 32x.

Volume Control Press **▲** or **▼** briefly or repeatedly to increase or decrease the sound volume

Repeat Press **REPEAT** key to select Repeat 1 track or Repeat all tracks

Shuffle Press **SHUFFLE** key to turn shuffle playback on or off

Stop Briefly press **■** on the right side of the player to stop playback

Fast backward / Fast forward Keep pressing **◀◀** or **▶▶** will search in fast speed, 2X, 4X, 6X or 8X. Then, press **►►** to resume normal playback

Volume Control Press **▲** or **▼** briefly or repeatedly to increase or decrease the sound volume

Repeat Press **REPEAT** key to select Repeat 1 track or Repeat all tracks

Shuffle Press **SHUFFLE** key to turn shuffle playback on or off

Stop Briefly press **■** on the right side of the player to stop playback

5.6 Playback Music MP3/WMA-CD

- 1 Briefly press **POWER** on the main control of the player to switch on the set.
- 2 Open the disc door and insert the disc.
- 3 The set will start to play the disc automatically.
- 4 Use navigation keys to select the folder and MP3/WMA file to be played.

Disc	PHILIPS
Folder 1	Music file 1
Folder 2	Music file 2
Folder 3	Music file 3
Folder 4	Music file 4
Folder 5	Music file 5
Folder 6	Music file 6
Folder 7	Music file 7
Folder 8	Music file 8
Folder 9	Music file 9
Folder 10	Music file 10
Folder 11	Music file 11
Folder 12	Music file 12
Folder 13	Music file 13
Folder 14	Music file 14
Folder 15	Music file 15
Folder 16	Music file 16
Folder 17	Music file 17
Folder 18	Music file 18
Folder 19	Music file 19
Folder 20	Music file 20
Folder 21	Music file 21
Folder 22	Music file 22
Folder 23	Music file 23
Folder 24	Music file 24
Folder 25	Music file 25
Folder 26	Music file 26
Folder 27	Music file 27
Folder 28	Music file 28
Folder 29	Music file 29
Folder 30	Music file 30
Folder 31	Music file 31
Folder 32	Music file 32
Folder 33	Music file 33
Folder 34	Music file 34
Folder 35	Music file 35
Folder 36	Music file 36
Folder 37	Music file 37
Folder 38	Music file 38
Folder 39	Music file 39
Folder 40	Music file 40
Folder 41	Music file 41
Folder 42	Music file 42
Folder 43	Music file 43
Folder 44	Music file 44
Folder 45	Music file 45
Folder 46	Music file 46
Folder 47	Music file 47
Folder 48	Music file 48
Folder 49	Music file 49
Folder 50	Music file 50
Folder 51	Music file 51
Folder 52	Music file 52</

便携式 DVD 播放器

用户手册

PET730
PET732



PHILIPS







Be responsible
Respect copyrights

规格更改恕不另行通知。
商标为荷兰皇家飞利浦电子股份有限公司或其各自所有者的专有财产。
© 2007 荷兰皇家飞利浦电子股份有限公司。版权所有。



中国印刷

    wk7065

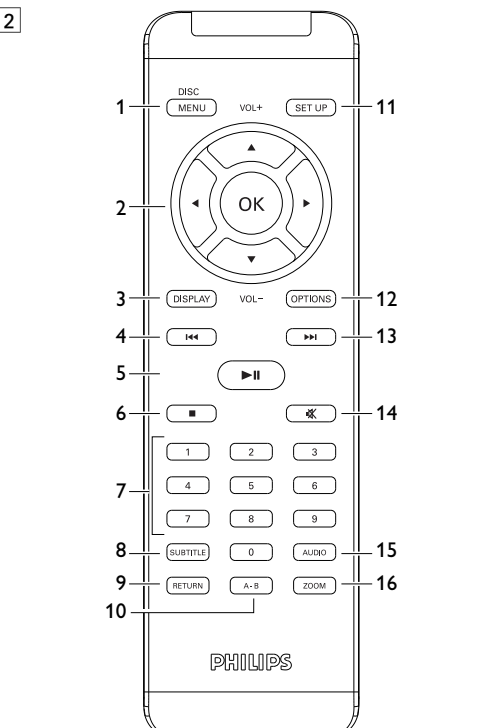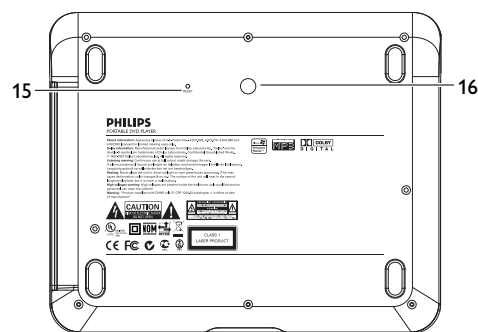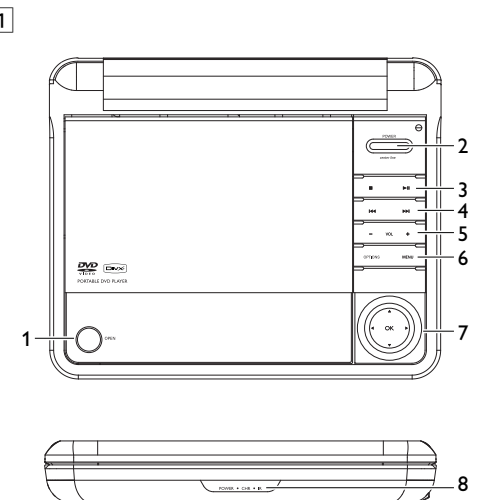

中文

目录

1 控制元件和功能组件	4.1 为 DVD 播放器充电
1.1 主要单元控制键	4.2 开启您的遥控器
1.2 播放器正面	5 启动
1.3 播放器右侧	5.1 设定
1.5 播放器背面	5.2 播放 DVD
1.6 遥控器	5.3 播放 VCD
2 介绍	5.4 播放超级-VCD
2.1 您的便携式 DVD 播放器	5.5 播放音乐光盘
2.2 启封包装	5.6 播放音乐 MP3/WMA 光盘
2.3 放置	5.7 播放图像光盘
2.4 可播放光盘格式	5.8 从 USB 播放
2.4.1 DVD 视频	6 附加功能
2.4.2 VCD 视频光盘	6.1 DISPLAY (显示) 目录
2.4.3 音频光盘 / MP3 / WMA 光盘	6.2 连接
2.4.4 附有 JPEG 文件的光盘	6.2.1 耳机
2.4.5 DivX 视频光盘	6.2.2 电视
2.5 Zero Bright Dot™ (零亮点)	6.2.3 音频视频输入
3 一般信息	6.2.4 USB
4 装置充电	6.2.5 同轴插孔
	7 疑难解答
	8 技术数据

1 控制元件和功能组件

1.1 主要单元控制键 (参见图 1)

- 1 OPEN (打开)
- 2 POWER (电源)
- 3 ■
- 4 ◀◀ / ▶▶
- 5 -VOL +
- 6 OPTION (选项)
- 7 MENU (菜单)
- 8 OK (确认)

1.2 播放器正面 (参见图 1)

- 8 POWER/IR/CHR (电源/远程感应器/充电显示灯)

1.4 播放器右侧 (参见图 1)

- 9 PHONE 1 & 2 耳机插孔
- 10AV OUT (音频/视频输出) 音频/视频输出
- 11AV IN (音频/视频输入) 音频/视频输入
- 12USB USB 连接器
- 13COAXIAL (同轴插孔) 数字音频输出
- 14DC IN 9V (直流输入 9V) 电源插座

1.5 播放器背面 (参见图 1)

- 15重启 停机时重启播放器

1.6 遥控器 (参见图 2)

- 1 MENU (菜单)
- 2 ▲, ▼, ◀, ▶ 显示 MENU (菜单) 页上 / 下 / 左 / 右导航
- 3 OK (确认) 确认选择
- 4 VOL+ / - 音量控制
- 5 DISPLAY (显示) 调整系统的显示值
| 6 ◀◀ | 返回上一章、曲目或标题 |
| 7 ▶▶ | 开始 / 暂停 / 恢复播放 |
| 8 ■ | 按键两次停止播放 |
| 9 0 - 9 | 数字键盘 |
| 10 SUBTITLE (字幕) | 字幕语言选择器 |
| 11 RETURN (返回) | 适用于 VCD 菜单页 |
| 12 A - B | 重复或循环菜单中的一个次序 |
| 13 SETUP (设定) | 进入 SETUP (设定) 菜单 |
| 14 OPTION (选项) | 进入附加功能 |
| 15 ▶▶▶ | 跳至下一章、曲目或标题 |
| 16◀◀ | 播放器静音 |
| 17AUDIO (音效) | 音频语言选择 |
| 18ZOOM (缩放) | 放大视频图像 |

注意 不同于这里的控制键或调整程序可能导致危险的辐射暴露或其他不安全操作。

2 介绍

2.1 您的便携式 DVD 播放器

您的便携式 DVD 播放器播放符合通用 DVD 视频标准的数字视频光盘。拥有它, 您可以享受完全长度的真实影院画面质量、享受立体声或多声道音效 (取决于光盘和播放设定) 的电影视频的独特特征。如选择声道和字幕语言、选择不同镜头角度 (同样取决于光盘), 都包括在内。

此外, 父母锁让您决定您的孩子可以观看哪些光盘。有了屏幕显示和播放器显示屏与遥控器的结合, 您会发现您的播放器使用起来非常简单。

2.2 后封包装

- 首先检查并识别包装中的物品, 如下所列:
 - 便携式 DVD 播放器
 - 汽车适配器 (12V) (AY4115)
 - 直流电源适配器 (AY4117)
 - 用户手册
 - 汽车头枕安装包 (AY4246)

2.3 放置

- 将播放器放置在稳固、平坦的表面。
- 远离家用供热设备并避免阳光直射。
- 如果播放器不能正确读取 CD/DVD, 在送去维修之前尝试使用一般可用到的清洁 CD/DVD 清洁镜头。其他清洁方法可能会损坏镜头。
- 一直保持关闭光盘门以避免镜头沾上灰尘。
- 镜头在播放器突然由冷的环境带到温暖环境时, 会凝结云状水珠。这时无法播放 CD/DVD。将播放器放在温暖的环境中直到水汽蒸发。

2.4 可播放光盘格式

除 DVD 视频光盘外, 您还可以播放所有 VCD、CD、CD-R、CD-RW、DVD±R 和 DVR±RW。

2.4.1 DVD 视频

取决于光盘上的内容 (电影、视频片段、系列剧等), 这些光盘可能有一个或多个标题, 而每个标题可能有一个章节或更多章节。为使访问简单方便, 播放器允许您能够在不同的标题和章节之间移动。

2.4.2 VCD 视频光盘

如光盘盒所示, 取决于 VCD 视频光盘上的内容 (电影、视频片段、系列剧等), 光盘可能具有一个或更多的轨道, 而每个轨道可能有一个或多个索引。为使访问简单方便, 播放器允许您能够在不同的轨道和索引之间移动。

2.4.3 音频光盘 / MP3 / WMA 光盘

音频光盘 / MP3 / WMA 光盘只包含音乐轨道。您可以使用遥控器和/或主装置上的键通过立体声系统以一贯方式播放他们, 或者使用屏幕显示 (OSD) 通过电视机播放。

2.4.4 CD 附有 JPEG 文件的光盘

您也可以在播放器上观看 JPEG 静止照片。

2.4.5 DivX 视频光盘

DivX 是 DivX 有限公司发明的受欢迎媒体技术。DivX 媒体文件含有高度压缩、高品质的视频, 却保持了较小的文件大小。DivX 文件还可以包括高级媒体功能, 如菜单、字幕和交替音频。许多 DivX 媒体文件都可以在线下载, 您也可以使用自己的个人内容和来自 DivX.com 的易用工具创建自己的媒体文件。

2.5 Zero Bright Dot™ (零亮点)

享受最高质量的图像 (LCD 显示屏上没有烦人的空白点)。LCD 显示屏通常有缺陷, 被 LCD 行业中被称为“亮点”。有限数量的亮点曾被认为是 LCD 行业大规模生产不可避免的副作用。飞利浦便携式 DVD 播放器采用了严格的质量控制程序。LCD 显示屏生产时的亮点允许量为零。选择带有 Philips Zero Bright Dot™ (飞利浦零亮点) 版本的便携式 DVD 播放器能保证最佳屏幕质量。保修服务因地区而异。如需更多详细信息, 请联系您当地的飞利浦代表。

3 一般信息

电源

- 本装置使用提供的交流适配器、汽车适配器或可充电电池组。
- 确定交流适配器的输入电压与当地电压相符。否则可能损坏交流适配器和本装置。
- 湿手切勿触摸交流适配器以防电击。
- 与汽车电源 (点烟器) 适配器连接时, 确保适配器输入电压与汽车电压一致。
- 长时间不使用本装置时从电源插口拔出交流适配器或移除电池。
- 握住插头来断开交流适配器。切勿拉电源卡。

请始终使用提供的直流/交流适配器 (AY4129)

安全和维护

- 激光射线对眼睛有害, 切勿拆开本装置。
- 任何服务均应由合格的服务人员进行执行。
- 如果液体或杂物进入本装置内部, 拔掉交流电适配器切断电源。
- 小心勿摔着本装置或使其遭受强烈震动, 这样会导致故障。

安全收听

- 收听时音量要适中。
- 耳机音量过高会损坏您的听力。即使暴露在此音量下的时间不超过一分钟, 所产生的声音分贝强度也可能损坏正常人的听力。较高的分贝范围是为听力已经受损的人士准备的。
- 声音有时会给您错觉。听一段时间后, 听觉“舒适度”就会适应音量调节得过高而您无法听到周围的声音。
- 身处有潜在危险的场所时, 请小心或暂停使用耳机。
- 开车、骑自行车、溜冰时请勿使用耳机; 否则会造成交通危险, 这在许多国家都属违法行为。
- 重要事项 (对于提供耳机的型号): 飞利浦确保原装机型号符合相关管理机构规定的音频播放器的最大音量。如果需要更换耳机, 我们建议您与经销商联系订购与飞利浦提供的原装机型号相同的耳机。
- 交通安全: 驾车或骑自行车时请勿使用, 否则可能造成事故。
- 切勿将播放设备暴露于过热环境, 如加热设备附近或日照。
- 本装置播放防水: 切勿将播放器浸入水中。播放器中进水将导致严重损坏。
- 切勿使用任何含酒精、氨水、苯或研磨剂的清洁剂, 否则会损坏播放器。
- 设备不能受到液体滴漏。切勿放置任何有危险的物体设备上 (如盛满液体的物体、点燃的蜡烛等)。
- 切勿触摸镜头!

设定安全的音量: 先将音量控制设定在一个低水平。然后慢慢慢慢, 直到您听起来舒服清晰且完全没有失真。收听时间应有所节制: 即使在“安全”水平下, 长时间收听也会损害听力。请务必适度使用您的设备, 并适时暂停休息。

使用耳机时务必遵守以下规范:

- 收听的时间和速度要适度。
- 注意不要根据您听力的适应像来调节音量。
- 请勿将音量调节得过高而您无法听到周围的声音。
- 身处有潜在危险的场所时, 请小心或暂停使用耳机。
- 开车、骑自行车、溜冰时请勿使用耳机; 否则会造成交通危险, 这在许多国家都属违法行为。
- 重要事项 (对于提供耳机的型号): 飞利浦确保原装机型号符合相关管理机构规定的音频播放器的最大音量。如果需要更换耳机, 我们建议您与经销商联系订购与飞利浦提供的原装机型号相同的耳机。
- 交通安全: 驾车或骑自行车时请勿使用, 否则可能造成事故。
- 切勿将播放设备暴露于过热环境, 如加热设备附近或日照。
- 本装置播放防水: 切勿将播放器浸入水中。播放器中进水将导致严重损坏。
- 切勿使用任何含酒精、氨水、苯或研磨剂的清洁剂, 否则会损坏播放器。
- 设备不能受到液体滴漏。切勿放置任何有危险的物体设备上 (如盛满液体的物体、点燃的蜡烛等)。
- 切勿触摸镜头!

长时间使用播放器, 其表面会发热。这是正常现象。

使用光盘

- 切勿在光盘上粘贴纸条或胶带。
- 避免光盘受阳光直射并使其远离热源。
- 播放后存放光盘于光盘盒中。
- 使用柔软、不含磨料的干净布从里向外清洁光盘。

关于液晶屏幕的使用

液晶屏幕为高科技产品。然而您可能会看见黑点连续地出现在液晶屏幕上。这是制造过程的正常结果, 并不表明这是故障。

环境信息

我们已经最大限度地减少包装材料并使其易于分成单一材料: 纸板、PS (聚苯乙烯)、PE (聚乙烯) 和 PET (聚酯)。组成您设备的材料如果由专业公司分解, 可以被回收。请遵守当地法规处理包装材料、废旧电池和旧设备。

版权信息

“DivX, DivX”已通过认证, 其相关标志为 DivX 有限公司的商标, 未经许可不得使用。所有其他的商标和产品名称为其相应公司或组织的商标。未经授权对任何从互联网下载记录或对 CD / VCD / DVD 复制都是违反版权法和国际条约的行为。Windows Media 和 Windows 标志是微软公司在美国 and / 或其他国家的注册商标。

4 装置充电

4.1 为 DVD 播放器充电

- 插上直流/交流适配器
- RED (红色) 的 LED 表示充电正在进行。设备未使用时, 完全充电大约需要 4 个小时。然而当设备在使用中时, 完全充电大约需要 8 个小时。
- 设备完全充电后, RED (红色) 的 LED 将熄灭。当屏幕上出现低电量提示时, 请为播放器充电。
- 可充电电池的充电循环次数有一定的数量限制并最终需要更换。电池寿命和充电循环次数因使用方式和设定而不同。

4.2 开启您的遥控器

- 1 打开电池盒。移除保护塑料片 (仅第一次使用时)。
- 2 插入一枚型号为 CR2025 的 3V 锂电池, 然后关上电池盒。

 
注意

- 电池包含化学物质, 请妥置处置。
- 电池更换不当将导致爆炸危险。
- 请勿将旧电池或损坏的电池投入火中。
- 电池使用不当将导致电解液泄漏并腐蚀电池盒或者导致电池爆炸。
- 长时间不使用时请取出电池。
- 高氯酸盐物质 - 可能需要特殊处理。请参见 www.dtsc.ca.gov/hazardouswaste/perchlorate。

5 启动

5.1 设定

- 1 按下 SETUP (设定) 这时会出现一个功能列表。

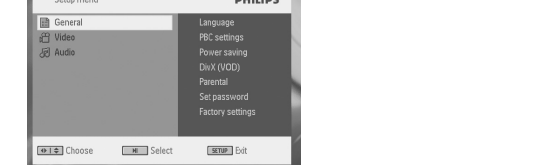

- 2 使用 ▲ / ▼ 突出显示您的选择。
- 3 使用 ◀◀ (或) ▶▶ 进入子菜单
- 4 使用导航键突出显示您需要的设定并按下 OK 进行确认。
- 5 SETUP (设定) 菜单包括:

一般	设定屏幕显示 (OSD) 语言
PBC 设定	开启/关闭播放控制功能。超级 VCD 具有此功能。
省电设定	开启/关闭省电模式
DivX (VOD)	获取 DivX (Video-On-Demand) 代码
家长指引	设定家长指引选项
设定密码	修改密码 (默认: 9999)
出厂设定	恢复出厂设定
视频	
电视画面显示	设定屏幕显示纵横比
电视标准	将视频输出格式设为电视系统
Mpeg 4 字幕	为 DivX 视频或 Mpeg 4 视频选择字幕语言
音效	
杜比环绕声	设定杜比环绕声输出
数字 (SPDIF)	设定数字输出格式

5.2 播放 DVD

- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 打开光盘门并插入光盘。
- 3 播放器将自动开始播放光盘。
- 4 使用导航键 ◀◀, ▶▶, ▲, ▼ 从 DVD 光盘菜单中选择一个项目, 如现在播放、选择语言和字幕等。

5 以下功能在播放时可用:

暂停	按下 ► 键可暂停播放。您可以再次按下 ► 键以恢复播放。
上一节目/下一节目	轻按 ◀◀ 或 ▶▶ 键或多次可选择您需要的章节
快速/快速	反复按 ◀◀ 或 ▶▶ 键将进行快速、2 倍速度、4 倍速度或 6 倍速度的搜索。然后按下 ► 键可继续正常播放。
音量控制	轻按 ▲ 或 ▼ 键或反复按它们可增加或减少音量
停止	轻按播放器右侧的 ■ 键可停止播放
字幕	更改字幕显示。按下 SUBTITLE (字幕) 或 OPTIONS (选项) 键可使用本功能
语言	更改语言。按下 AUDIO (音效) 或 OPTIONS (选项) 键可使用本功能
视角	更改 DVD 光盘提供的观看视角。按下 OPTIONS (选项) 键可使用本功能
缩放	放大屏幕, 然后使用导航键拍摄屏幕。按下 ZOOM (缩放) 或 OPTIONS (选项) 键可使用本功能
重复 A-B	设定重复循环播放。按下 A-B 设定开始点, 并再次按下 A-B 设定结束点。然后播放器将进行重复循环播放。按下 A-B 可取消循环播放。

5.3 播放 VCD

- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 打开光盘门并插入光盘。
- 3 播放器将自动开始播放光盘。
- 4 以下功能在播放时可用:

暂停	按下 ► 键可暂停播放。您可以再次按下 ► 键以恢复播放。
上一节目/下一节目	轻按 ◀◀ 或 ▶▶ 键或多次可选择您需要的曲目
快速/快速	反复按 ◀◀ 或 ▶▶ 键将进行快速、2 倍速度、4 倍速度或 6 倍速度的搜索。然后按下 ► 键可继续正常播放。
音量控制	轻按 ▲ 或 ▼ 键或反复按它们可增加或减少音量
停止	轻按播放器右侧的 ■ 键可停止播放
音效	一些 VCD 仅有 2 种语言可供选择。您可以使用本装置调节音量。按下 AUDIO (音效) 或 OPTIONS (选项) 键可使用本功能
缩放	放大屏幕, 然后使用导航键拍摄屏幕。按下 ZOOM (缩放) 或 OPTIONS (选项) 键可使用本功能
重复 A-B	设定重复循环播放。按下 A-B 设定开始点并再次按下 A-B 设定结束点。然后播放器将进行重复循环播放。按下 A-B 可取消循环播放。

5.4 播放超级 VCD

- (超级) VCD 可能具有 PBC (播放控制) 功能。这使您能够按照显示屏上的菜单交互式播放 VCD。
- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 将 (超级) VCD 插入播放器右侧的光盘插槽。PBC 开启时, 屏幕上将出现光盘索引菜单。
- 3 使用数字键盘 0-9 输入您的选择或选择一个播放选项。
- 4 按下遥控器上的 RETURN (返回) 键返回前一个菜单
- 5 要开启/关闭播放控制模式, 请进入 SETUP (设定) 并选择 PBC settings (PBC 设定)。


5.5 播放音乐光盘

- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 打开光盘门并插入光盘。
- 3 播放器将自动开始播放光盘。
- 4 以下功能在播放时可用:

暂停	按下 ► 键可暂停播放。您可以再次按下 ► 键以恢复播放。
上一节目/下一节目	轻按 ◀◀ 或 ▶▶ 键或多次可选择您需要的曲目
快速/快速	反复按 ◀◀ 或 ▶▶ 键将进入快速搜索模式。然后轻按一次将搜索速度变为 2 倍、4 倍、6 倍、8 倍、16 倍或 32 倍。
音量控制	轻按 ▲ 或 ▼ 键或反复按它们可增加或减少音量
重复	按下 OPTIONS (选项) 键可选择重复 1 个曲目或重复所有曲目
随机播放	按下 OPTIONS (选项) 键可开启或关闭随机播放
停止	轻按播放器右侧的 ■ 键可停止播放

5.6 播放音乐 MP3/WMA 光盘

 - 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 打开光盘门并插入光盘。
- 3 播放器将自动开始播放光盘。
- 4 使用导航键选择文件类型和要播放的 MP3/WMA 文件。

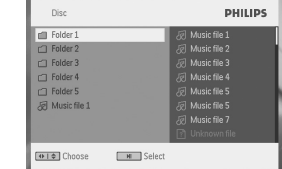


5 以下功能在播放时可用:

暂停	按下 ► 键可暂停播放。您可以再次按下 ► 键以恢复播放。
上一节目/下一节目	轻按 ◀◀ 或 ▶▶ 键或多次可选择您需要的曲目
快速/快速	反复按 ◀◀ 或 ▶▶ 键将进行快速、2 倍速度、4 倍速度或 6 倍速度的搜索。然后按下 ► 键可继续正常播放。
音量控制	轻按 ▲ 或 ▼ 键或反复按它们可增加或减少音量
重复	按下 OPTIONS (选项) 键可选择重复 1 个曲目或重复所有曲目
随机播放	按下 OPTIONS (选项) 键可开启或关闭随机播放
停止	轻按播放器右侧的 ■ 键可停止播放

5.7 播放图像光盘

 - 播放器只能读取 JPEG 格式的图像。
- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 打开光盘门并插入光盘。
- 3 播放器将自动开始播放光盘。
- 4 使用导航键选择文件类型和要播放的 JPEG 文件。

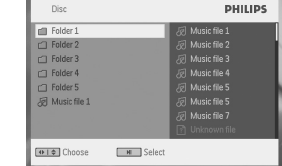

5 以下功能在播放时可用:

暂停	按下 ► 键可暂停播放。您可以再次按下 ► 键以继续播放。
上一节目/下一节目	轻按 ◀◀ 或 ▶▶ 键或多次可选择您需要的曲目
旋转	按下 OPTIONS (选项) 键可选择旋转模式。然后使用 ◀ 键顺时针旋转图像。使用 ▶ 键逆时针旋转图像。按下 OPTIONS (选项) 键可退出旋转模式。
缩放	放大屏幕, 然后使用导航键拍摄屏幕。按下 ZOOM (缩放) 或 OPTIONS (选项) 键可使用本功能
停止	轻按播放器右侧的 ■ 键可停止播放
播放结束时	按下 ■ 使光盘从播放器中弹出。

5.8 从 USB 播放

USB 端口支持 JPEG / MP3 / WMA / DivX / MPG-4 文件的播放。

但无法将数据从 DVD 传输或记录到 USB 端口中。

 
- 1 轻按播放器主机上的 POWER (电源) 键启动装置。
- 2 将 USB 闪存盘或 USB 记忆卡读卡器插入 USB 端口。

USB 插入式存储仅支持大容量存储 (MSC) 设备。它不支持硬盘 USB 存储设备和 MTP (音乐传输协议) 格式的设备。

3 播放器将自动浏览并显示 USB 闪存设备中的内容。

DVD 播放器浏览您的 USB 闪存盘中的内容时将花费一些时间浏览时间因您的 USB 驱动器的存储容量和内容数量而异。

4 使用导航键选择您想要存取的文件, 然后按 OK 播放它。

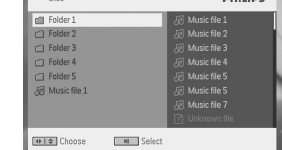

5 播放结束时, 将 USB 闪存盘或 USB 记忆卡从播放器中拔出。

要停用 USB 浏览器或切换到 DVD 播放, 只要拔出 USB 插头即可。

6 附加功能

6.1 DISPLAY (显示) 目录

如果在播放时按下 DISPLAY (显示), 下面的菜单将出现, 您可以获得相应的功能和信息:



亮度	使您能够调整屏幕的亮度
对比	使您能够调整屏幕的对比度
色彩	使您能够根据冷、暖 and 标准色调整屏幕的颜色
关闭 LCD	在与电视相连或播放音乐光盘等情况下, 您可以关闭屏幕。这样可以节省电池的电量
电池电量	显示电池的电量

6.2 连接

 
 
 
 
 
 
 
 
 
 
 
 
6.2.1 耳机

将耳机连接到播放器任意一侧的耳机插孔。



6.2.2 电视

您可以将播放器连接到电视上观看 DVD。




Analog TV

Before installation, please make sure that you are in an area with sufficient TV signal coverage. As the TV signal is weaker in an indoor environment, please always connect to a TV wall socket for the best reception quality when using it at home or indoor.

1 First Time Installation

Antenna connection

 
Before you start to search for TV channels, connect the DVD player to the antenna as shown.

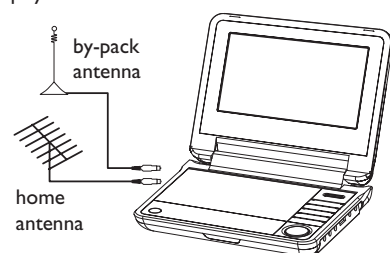


2 Setup TV channels

Setup your TV

 1 Press **OPTIONS** and select **SOURCES > TV**

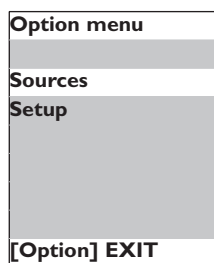

 
2 In TV mode, press **SETUP**, the **TV Setup** menu will be displayed to show the following available functions.

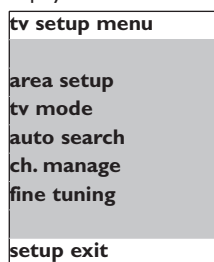

- **area setup:** Select your area
- **tv mode:** Select a TV mode
- **auto search:** Run auto search for all available TV channels
- **ch. manage:** Manage channels by deleting or renaming them
- **fine tuning:** Fine tune each TV channel


3 Area Setup

 - Please make sure that you select the correct area that matches your local TV system.
- Use **▲/▼** key to select your area.

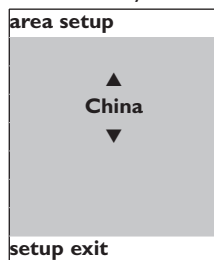

4 TV mode

 There are several modes available.

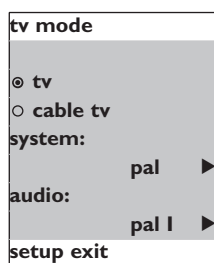


- tv** For normal on-the-air TV reception
- cable tv** For cable TV reception
- system:** The standard TV system used in various countries. E.g. China use PAL TV system, Russian use SECAM TV system
- audio:** E.g. China is PAL DK, Russian is SECAM D.

5 Auto search

Auto search provides an overall search for all available channels in your country.

 - Press **OK** to start auto search. The screen will display "running xx%".

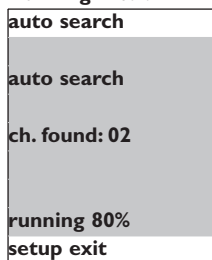

- Upon completion, the screen will display "**finished**".

 
When search is completed, the first channel found will be displayed.

A channel counter will indicate the number of channels that can be found.

Note Sometimes, there may be duplicated or empty channels found after Auto Search. This is due to TV signal interference in some areas, not a malfunction of your product.

6 Channel manage

You can perform channel management

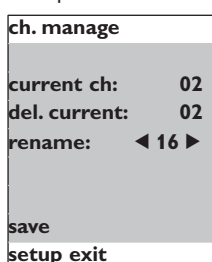


- **current ch:** It displays the channel number of the TV channel you are currently watching.
- **del. current:** You can delete the current channel. E.g. If a duplicate or empty channel was found due to interference, you can delete those channel.
- **rename:** You can rename the channel number. *The renamed channel will overwrite the existing one. Please confirm when you rename the channel.*

Please remember to **save** before you exit **ch. manage** menu. Otherwise, your changes will not be captured.

7 Fine tuning

 When there is interference in watching the TV, you can fine tune the frequency of the reception.

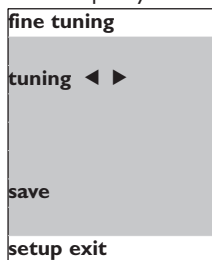

- In the **fine tuning** menu, press **◀ / ▶** key to decrease / increase the frequency of the reception.
- You can press **◀ / ▶** keys until a better picture quality with less interference is found.
- Please remember to **save** before you exit the **fine tuning** menu. Otherwise, your tuning will not be captured.

3 Enjoy TV programs

To change channels

- In TV mode, you can either press **CH-/CH+** to change channels.
- Or, you can enter the channel number with the numeric keys and press **OK**.

To change volume

- Press **vol+ / vol-** to adjust the volume level.
- Press **M** to mute the volume. Press **M** again to restore sound.

 
模拟电视

安装前请确保所在区域具有充足的电视信号覆盖。由于室内环境下电视信号较弱，在室内使用时请连接到室内天线插座上以确保最佳的接收质量。

1 首次安装

天线连接


开始搜索电视频道前，按照图示将DVD播放器连接到天线上。

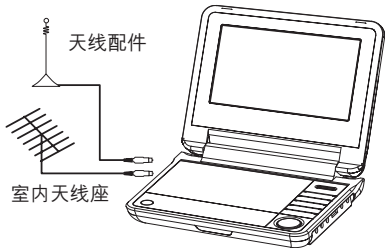


2 设置电视频道

设置电视

 1 按下 **OPTIONS (选项)** 并选择 **SOURCES (来源) > TV (电视)**

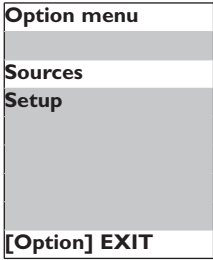

 
2 在电视模式下按下 **SETUP (设置)**，会显示 **TV Setup (电视设置)** 菜单以显示以下可用的功能。

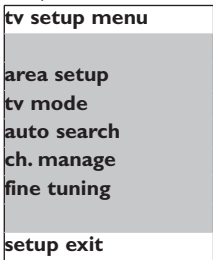

- **area setup:** 选择您的地区
- **tv mode:** 选择一个电视模式
- **auto search:** 自动搜索所有可用的电视频道
- **ch. manage:** 删除或重命名频道
- **fine tuning:** 微调各个电视频道


3 地区设置

 - 请确保您所选的地区与您的本地电视系统匹配。
- 使用 **▲/▼** 键选择您的地区。

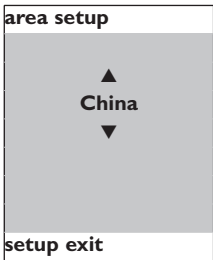

4 电视模式

 有几种可用的模式。

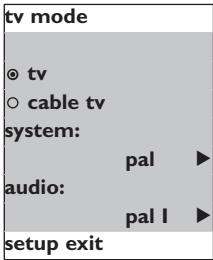


- tv** 用于正常的无线电视接收
- cable tv** 用于有线电视接收
- system:** 用于各种国家的标准电视系统。例如中国使用 PAL TV 系统和俄国使用 SECAM 系统。
- audio:** 中国使用 PAL DK, 俄国使用 SECAM D.

5 自动搜索

自动搜索可以全面搜索您的地区所有可用频道。

 - 按下 **OK** 开始自动搜索。屏幕会显示 **“running xx%”** (正在运行 xx%)。

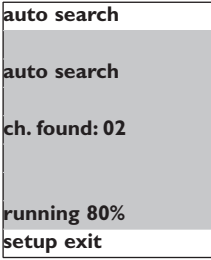


- 完成时屏幕会显示 **“finished”** (完成)。
- 搜索完成时，会显示第一个找到的频道。
- ch. found (频道计)** 会指明可以找到的频道数量。

注 Auto Search (自动搜索) 后，有时会出现重复或空白的频道。这是某些区域内电视信号干扰造成的，并非产品故障。

6 Channel manage (频道管理)

 您可以进行频道管理。

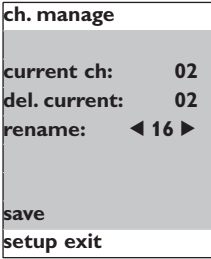


- **current ch(当前频道):** 显示您当前正在收看的电视频道号码。
- **del. current(删除当前频道):** 您可以删除当前的频道。例如，如果发现由于干扰造成频道重复，那么您可以删除重复的频道。
- **rename(重命名):** 您可以重命名频道号码。重新命名的频道会覆盖现有的频道。重命名频道时请确认。

退出 **ch. manage (频道管理)** 菜单前请 **save (保存)**。否则，您的更改无法生效。

7 Fine tuning (微调)

 收看电视时如果存在干扰，您可以微调接收频率。

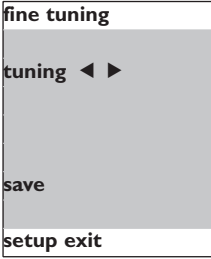

- 在 **fine tuning (微调)** 菜单中按下 **◀/▶** 键来减少/增加接收频率。
- 您可以按下 **◀/▶** 键直到找到干扰较少的图像质量。
- 退出 **fine tuning (微调)** 菜单前请 **save (保存)**。否则，您的微调无法生效。

3 享受电视节目

转换频道

- 在电视模式下，您可以按下 **CH-/CH+** 来转换频道。
- 或者您可以使用数字键输入频道编号并按下 **OK**。

更改音量

- 按下 **vol + / vol -** 来调节音量。
- 按下 **静音** 来静止音频。再次按下 **静音** 来恢复音量。